
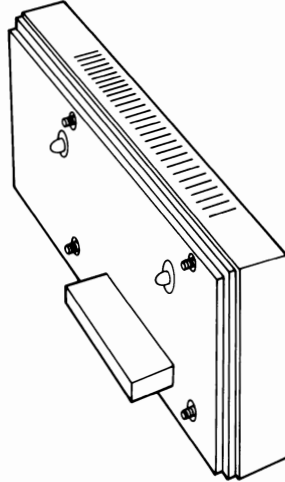


# IBM PCjr Parallel Printer Attachment Installation Instructions

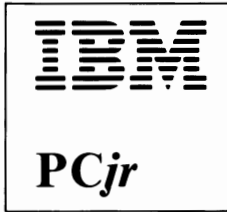

Printer

**If your IBM PCjr has not been set up at this time, do so before installing this option.**

This carton contains the following:

- Parallel Printer Attachment

If this item is missing or damaged, notify your place of purchase.

## LIMITED WARRANTY

The International Business Machines Corporation warrants this IBM Personal Computer Product to be in good working order for a period of one year from the date of purchase from IBM or an Authorized IBM Personal Computer Dealer. Should this Product fail to be in good working order at any time during this one year warranty period, IBM will, at its option, repair or replace this Product at no additional charge except as set forth below. Repair parts and replacement Products will be furnished on an exchange basis and will be either reconditioned or new. All replaced parts and Products become the property of IBM. This limited warranty does not include service to repair damage to the Product resulting from accident, disaster, misuse, abuse, or non-IBM modification of the Product.

Limited Warranty service may be obtained by delivering the Product during the one year warranty period to an Authorized IBM Personal Computer Dealer, or any IBM Service/Exchange Center and providing proof of purchase date. If this Product is delivered by mail, you agree to insure the Product or assume the risk of loss or damage in transit, to prepay shipping charges to the warranty service location and to use the original shipping container or equivalent. Contact an Authorized IBM Personal Computer Dealer or write to IBM Personal Computer, Sales and Service, P.O. Box 1328-W, Boca Raton, Florida 33432, for further information.

ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO A PERIOD OF ONE YEAR FROM THE DATE OF PURCHASE, AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THIS PERIOD. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

IF THIS PRODUCT IS NOT IN GOOD WORKING ORDER AS WARRANTED ABOVE, YOUR SOLE REMEDY SHALL BE REPAIR OR REPLACEMENT AS PROVIDED ABOVE. IN NO EVENT WILL IBM BE LIABLE TO YOU FOR ANY DAMAGES, INCLUDING ANY LOST PROFITS, LOST SAVINGS OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OF OR INABILITY TO USE SUCH PRODUCT, EVEN IF IBM OR AN AUTHORIZED IBM PERSONAL COMPUTER DEALER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, OR FOR ANY CLAIM BY ANY OTHER PARTY.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR CONSUMER PRODUCTS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

FOR WARRANTY SERVICE OR ASSISTANCE IT IS RECOMMENDED THAT THIS PRODUCT BE RETURNED TO THE AUTHORIZED IBM PERSONAL COMPUTER DEALER FROM WHOM IT WAS PURCHASED OR TO ANY IBM SERVICE/EXCHANGE CENTER.

# Contents

Installation Requirements .....	2
Tools Required .....	2
Installation Instructions .....	3

# Installation Requirements


Your IBM PCjr must be set up before you can install this option.

## Tools Required

- Medium-size flat blade screwdriver.


# Installation Instructions

- 1 Turn your IBM PCjr power off.
- 2 Turn all external option power off (printer, TV, etc).
- 3 Unplug the power cords for your IBM PCjr and all options from wall outlets.

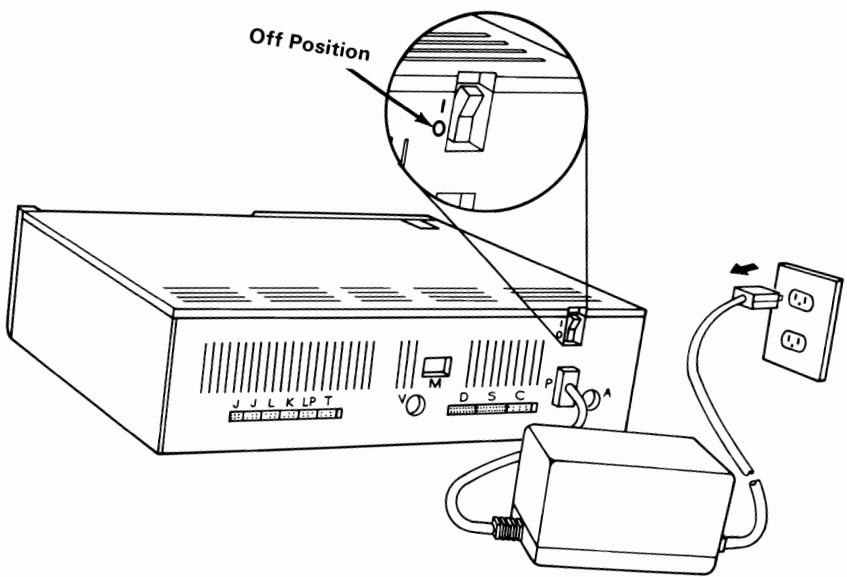


- 4** Turn your IBM PCjr so the right side is toward you. Remove the option attachment cover.

**Note:** It may be necessary to gently pry the cover off by inserting a screwdriver between the option attachment cover and the side of your IBM PCjr.

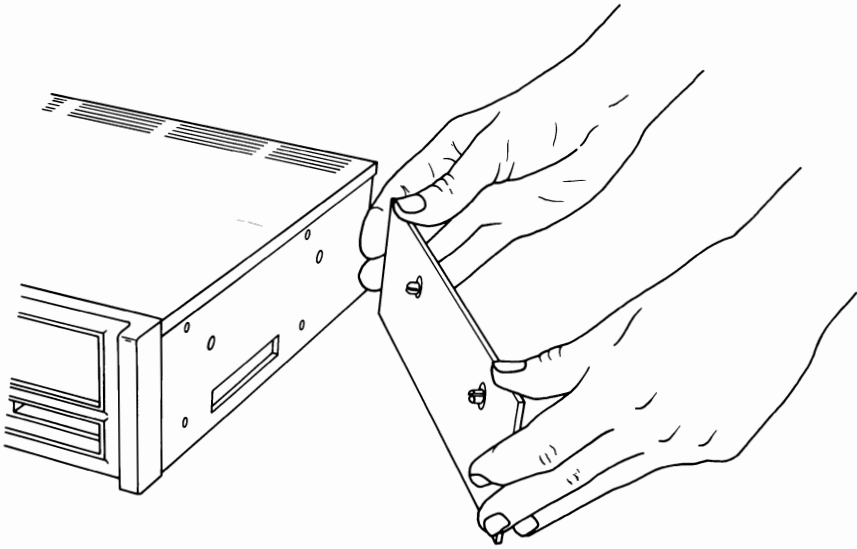


- 5 Position the IBM PCjr Parallel Printer Attachment so the mounting holes and attachment slot line up with the mounting pins and attachment connector. Then press the IBM PCjr Parallel Printer Attachment into place.
- 6 Tighten the four mounting screws until they are snug.

**Note:** Use a medium-size flat blade screwdriver.

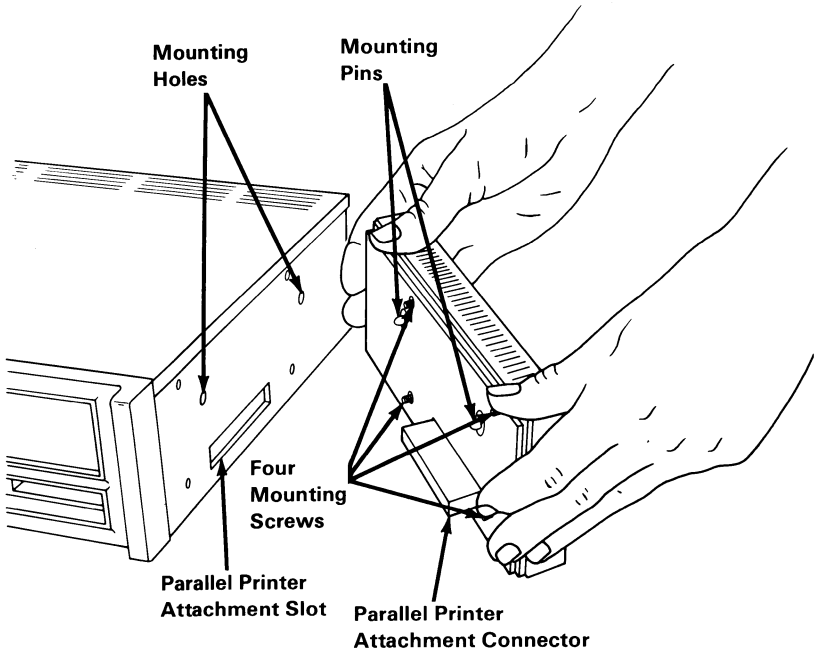

- 7** Install the option attachment cover. Make sure it is pressed firmly into the mounting holes.

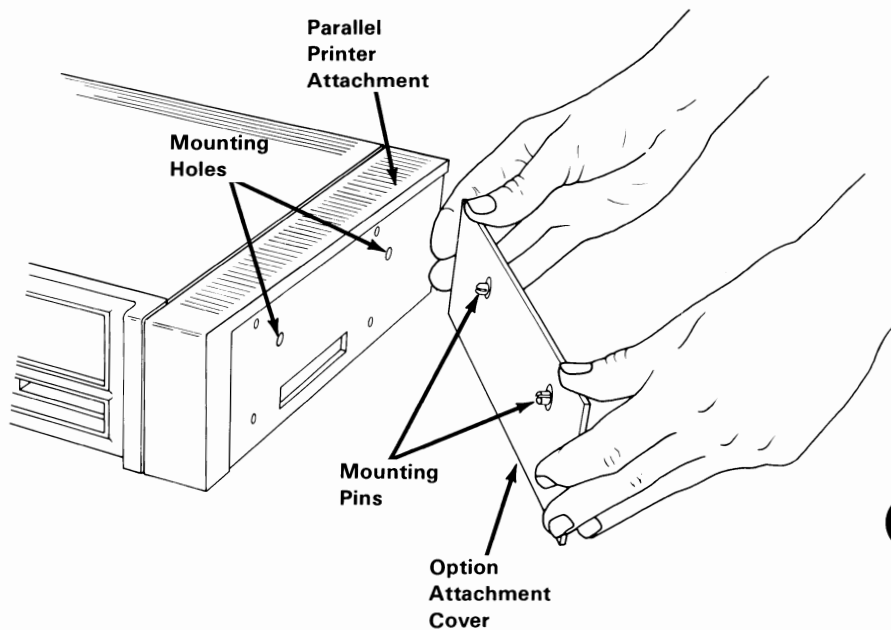



- 8 Plug the IBM PCjr and all option power cords into wall outlets.

**Important:**

**Insert these option instructions into Section 5 of the *Guide to Operations* manual.**

- 9 When you have completed installation of the Parallel Printer Attachment, continue with the installation of the IBM Graphics Printer.

**Notes:**



**Notes:**

**Printer**

**Notes:**