

---

# Index

## A

- access Configuration/Setup Utility program 4-7
- activity monitor option 4-20
- adapter slot position 3-6
- adapters, installing 3-9
- add
  - cache memory 3-7
  - drivers 2-5
  - internal drive 3-10
  - memory module kits 3-4
  - memory modules 3-4
  - SBC 3-3
  - system memory (SIMMs) 3-4
- address conflicts 5-7
- administrator password option 4-14
- advanced CPU setup option 4-16
- advanced power management option 4-19
- advanced setup option 4-16
- agency and standards compliance 1-5
- APM BIOS mode option 4-20
- application-specific drivers 4-20
- assignments, serial port 4-23
- automatic power management 4-20

## B

- backplane and cables (FRUs) 9-4
- backplane, removing and replacing 8-48
- battery failure error message 5-10
- battery, memory-retention 4-22
- beep symptoms 8-18
- beeps, POST 8-3
- BIOS level 8-2
- BIOS, updating 4-29
- blank screen 5-5
- boot error, hard disk 8-31
- bottom cover (FRUs) 9-2
- brightness control 2-4
- broken cover lock 5-6
- BTUs (British Thermal Units) 1-4
- bus card connectors B-5

## C

- cable connectors B-5
- cables, connecting 2-3
- cache control option 4-17
- cache memory, installing 3-7
- CAD Panacea video drivers, installing D-6
- change
  - configuration information 4-6, 4-8
  - logical unit numbers 8-8

change (*continued*)

- parallel-port assignment 4-25
- resolutions D-3, D-4
- selected tests in test groups 8-9
- serial port assignments 4-24
- channel assignments, DMA C-2
- checkouts
  - beeps 8-18
  - display 8-17
  - general 8-10
  - keyboard 8-12
  - Module Tests Menu 8-6
  - no beeps 8-19
  - power supply 8-15
  - power-supply connections 8-16
  - printer 8-15
  - USB port 8-13
- code page 4-28
- color graphics adapter (CGA) 4-27
- color, high resolution 4-28
- COM1 serial port 4-23
- command-line options 8-7
- communications 4-24
- component layout, 7563 Passive Backplane System 1-2
- configuration
  - 7563 Passive Backplane System 4-1
  - activity monitor 4-20
  - administrator password 4-14
  - advanced power management 4-19
  - advanced setup 4-16
  - APM BIOS mode 4-20
  - cache control 4-17
  - changing 4-6, 4-8
  - conflicts 4-5
  - CPU advanced setup 4-16
  - date and time 4-13
  - device change 5-13
  - DMA resources 4-19
  - drive security option 4-14
  - errors 4-5
  - ethernet setup 4-16
  - hardware change 5-9
  - I/O port resources 4-18
  - interrupt resources 4-19
  - ISA legacy resources 4-17
  - memory change 5-13
  - memory resources 4-18
  - overview 4-4
  - PCI bus 0 data 4-9
  - PCI control 4-17
  - plug and play control 4-17

- configuration (*continued*)
  - power-on password 4-14
  - product data 4-8
  - purpose 4-6
  - ROM shadowing 4-17
  - start options 4-15
  - system security 4-13
  - system summary 4-8
  - updating system unit 4-6
  - USB setup 4-16
  - utility program 4-6
  - video 4-28
  - viewing 4-8
  - watchdog/thermal setup 4-16
- Configuration/Setup Utility program
  - accessing 4-7
  - activity monitor option 4-20
  - administrator password option 4-14
  - advanced power management 4-19
  - advanced setup 4-16
  - APM BIOS mode 4-20
  - cache control option 4-17
  - date and time option 4-13
  - description 5-1
  - devices and I/O ports option 4-9
  - DMA Resources option 4-19
  - drive security option 4-14
  - ethernet setup 4-16
  - hard disk drive option 4-12
  - I/O port resources option 4-18
  - IDE drives setup option 4-12
  - interrupt resources option 4-19
  - ISA legacy resources 4-17
  - main menu screen 4-7
  - Memory Resources option 4-18
  - moving around the screens 4-7
  - PCI bus 0 data 4-9
  - PCI control option 4-17
  - plug and play control 4-17
  - power-on password 4-14
  - product data 4-8
  - ROM shadowing 4-17
  - run 2-5
  - selecting a monitor D-2
  - service procedures 8-1
  - start options option 4-15
  - starting 4-7
  - system security option 4-13
  - System Summary 4-8
  - USB setup 4-16
  - using 4-6
  - Video Setup option 4-11
  - watchdog/thermal setup 4-16
- conflicts, eliminating assignment 5-7
- connect cables 2-3

- connectivity E-2
- connectors
  - backplane, model 001 B-5
  - bus card B-5
  - cable B-5
  - miscellaneous 6-9
  - SBC 6-5
  - USB port 6-8
  - video PMC card 7-1
- cover lock, broken 5-6
- cover, removing 3-2
- CPU setup option 4-16

## D

- data, transferring 4-24
- date and time, setting 4-13
- default resolutions D-1
- detect POST errors 5-1, 5-2
- device configuration error 5-13
- device drivers
  - downloading 8-2
  - installing CAD Panacea D-6
  - installing MicroStation PC D-7
  - installing OS/2 D-5
  - installing Windows 3.1 D-2
  - installing Windows 95 D-4
  - installing Windows NT D-5
  - overview 4-20
- device records A-1
- devices and I/O ports option 4-9
- devices, handling discharge-sensitive E-15
- diagnostic
  - command-line options 8-7
  - diskette 5-1
  - error messages 5-2, 5-13
  - errors 5-9
  - programs 5-1
  - QAPLus/PRO program 8-5
  - tests, extended memory 8-8
  - tools 5-1, 8-3
- diamond symbol 8-7
- dimensions (7563 Passive Backplane System) 1-4
- DIN (Deutsches Institut für Normung) connector 6-6
- direct memory access (DMA) channel
  - assignments 4-21, 4-22, C-2
- discharge-sensitive devices, handling E-15
- disconnect cables 8-32
- diskette
  - diagnostic programs 5-3
  - Diagnostics 5-1
  - drive access 4-2
  - drive in-use lights 5-4
  - drive replacement 8-35
  - FRUs 9-2
  - parts catalog 9-2

*diskette (continued)*

- secure drives 4-14
- starting diagnostic program 8-8
- updating 4-29

*diskettes drives, security 4-14*

*display*

- blank screen 5-5
- checkout 8-17
- distorted screen 5-5
- error codes 5-2, 5-8
- jitter 5-5
- problems 5-5, 5-8
- rolling screen 5-5
- selecting 4-27
- self-tests 5-4
- support 4-28
- SVGA 4-27
- wavy screen 5-5

*DMA channel assignments 4-21, 4-22, C-2*

*DMA Resources option 4-19*

*download programs 8-2*

*driver, installing S3 Trio64V+ Super VGA D-1*

*drivers*

- adding 2-5
- application-specific 4-20
- device-specific 4-20
- installing 2-5
- video 4-27

*drives*

- description A-1
- diskette drive replacement 8-35
- hard disk 4-12
- hard disk boot error 8-31
- hard disk jumper settings B-2
- in-use lights 5-4
- installing external device 4-25
- installing internal 3-10
- parts catalog 9-2
- replacing hard disk 8-36, 8-37
- security 4-14

## E

*EEPROM, flash 4-29*

*electrical safety E-11*

*electronic emission E-2*

*electrostatic devices, handling E-15*

*emission, electronic E-2*

*enhanced graphics adapter (EGA) 4-27*

*environment specifications 1-4*

*equipment approvals and certifications 1-5*

*error recovery timer 4-26*

*errors*

- battery failure 5-10
- beep symptoms 8-18
- code format, POST 8-4

*errors (continued)*

- configuration 4-5
- detecting POST 5-2
- device configuration 5-13
- diagnostic 5-9, 5-13
- hard disk boot error 8-31
- memory configuration 5-13
- message types 8-4
- messages, described 5-9
- messages, list of 5-8, 8-24
- messages, types of 5-2
- numeric codes 8-20
- POST 4-6, 5-2, 5-9, 5-10
- prompt 5-8
- software 5-9

*Ethernet access 4-2*

*ethernet setup option 4-16*

*external power connector 6-10*

*external serial devices, installing 4-24*

## F

*fan (power supply) problems 5-6*

*fans and filters (FRUs) 9-4*

*feature cards, replacing 8-34*

*field help (F1) 4-6*

*field-replaceable units (FRUs)*

- backplane and cables 9-4
- bottom cover 9-2
- CD-ROM drives 9-2
- diskette drives 9-2
- fans and filters 9-4
- hard disk drives 9-2
- IBM SBC 9-2
- keyboards 9-8
- mouse 9-8
- numbers 9-1
- parts catalog 9-1
- power cord 9-8
- top cover 9-6

*Flash (BIOS/VPD) update procedure 8-2*

*flash, updating 4-29*

*flicker, screen 4-27*

*front fan, replacing 8-39*

*FRUs*

*See field-replaceable units (FRUs)*

## G

*general checkout 8-10*

*general problems 5-6*

*general safety E-10*

*graphics 4-27*

*grounding requirements E-15*

*guide, safety inspection E-14*

## H

handle static-sensitive devices E-15

hard disk

- bad sector 5-8
- boot error 8-31
- drive access 4-2
- FRUs 9-2
- jumper settings B-2
- parts catalog 9-2
- replacing 8-36, 8-37
- security 4-14
- testing 5-8

hardware

- diagnostic error messages 5-13
- problems 5-1, 8-3
- testing programs 5-1

heat output 1-4

high-resolution color 4-28

home page, Internet 8-2

hub, USB port 4-26

## I

I/O port resources option 4-18

I/O ports, configuration information 4-9

IBM SBC

See single-board computer (IBM SBC)

ID numbers, system unit A-1

IDE drives setup option 4-12

in-use lights 5-4

indicator lights problem 5-6

indicators, SBC 6-3

industry-standard architecture (ISA)-bus adapters C-1

inspection guide, safety E-14

install

- 7563 Passive Backplane System 2-1
- adapters 3-9
- application programs 4-2
- cache memory 3-7
- CAD Panacea video drivers D-6
- device drivers 2-5
- external parallel devices 4-25
- external serial devices 4-24
- internal drive 3-10
- internal options 2-2
- memory modules 3-4
- MicroStation PC video drivers D-7
- operating system 4-2
- options 3-1
- OS/2 video drivers D-5
- parallel devices, external 4-25
- RAM memory module kits 3-4
- S3 Trio64V+ Super VGA driver D-1
- SBC 3-3
- serial devices, external 4-24

install (*continued*)

Windows 3.1 video drivers D-2

Windows 95 video drivers D-4

Windows NT video drivers D-5

intermittent problems 5-6

internal drive, installing 3-10

internal/external drivers A-1

Internet address 8-2

interrupt

and DMA assignments C-1

conflicts 5-7

request assignments 4-21, C-1

resources option 4-19

ISA legacy resources option 4-17

ISA-bus adapters C-1

## J

jumper block 6-10

## K

keyboard

part numbers 9-8

password 4-3

problems 5-6

keyboardless operation mode 4-4

kits, installing RAM memory module 3-4

## L

languages 4-28

layout, 7563 Passive Backplane System

components 1-2

LED assembly, replacing 8-41

LEDs (light-emitting diodes) 4-1

lights not working 5-6

lights, in-use 5-4

lithium battery 4-22

lock for cover, broken 5-6

logical unit numbers, changing 8-8

## M

mass storage device configuration information 4-12

MCGA (multicolor graphics array) 4-27

memory configuration error 5-13

Memory Resources option 4-18

Memory Test Group 8-8

memory-retention battery 4-22

menu, module tests 8-6

messages

battery failure error 5-10

beep patterns 8-4

device configuration error 5-13

diagnostic error 5-9, 5-13, 8-4

Enter password prompt 5-2

- messages (*continued*)
  - error 8-24
  - error, types of 5-2, 8-4
  - memory configuration error 5-13
  - multiple 8-4
  - POST error 5-1, 5-2, 5-10, 8-4
  - software-generated 8-4
- MicroStation PC video drivers, installing D-7
- Module Tests Menu 8-6
- module tests selection 8-8
- monitor, selecting D-2
- monitor, thermal/watchdog 4-26
- mount 7563 Passive Backplane System 2-3
- mouse (FRUs) 9-8
- mouse problems 5-6
- move around Configuration/Setup Utility screens 4-7

## N

- no beeps 8-19
- notices E-1
- numeric error codes 8-20

## O

- occasional problems 5-6
- on/off switch 4-1
- open 7563 Passive Backplane System 3-2
- open the system unit 8-33
- operator information 4-1
- options problems 5-7
- options, adding 3-1
- OS/2 video drivers, installing D-5
- overview of 7563 Passive Backplane System 1-1

## P

- parallel devices, external 4-25
- parallel port assignments 4-24
- parallel port mode, changing 4-25
- parts catalog 9-1
- parts warranty 9-1
- passwords
  - administrator 4-14
  - keyboard 4-3
  - power-on 4-3, 4-14, 5-2, 5-6
  - prompt 5-8
  - removing 4-3
  - system administrator 4-3
- PCI bus 0 data option 4-9
- PCI control option 4-17
- physical specifications 1-4
- PICMG (PCI Industry Computer Manufacture's Group) 1-1
- pin assignments, serial port B-9

- plug and play control 4-17
- pointing-device problems 5-6
- port access, USB 4-2
- port-assignment conflicts 5-7
- ports, configuring I/O 4-9
- POST
  - See power-on self-test (POST)
- power cord part numbers 9-8
- power management 4-19
- power supply 1-4, 4-1
- power supply fan problems 5-6
- power supply, replacing 8-38
- power switch 4-1
- power switch, replacing 8-41
- power switch, setting 2-2
- power-on password 5-2, 5-6
- power-on password option 4-14
- power-on problems 5-2, 5-7
- power-on self-test (POST)
  - battery failure error 5-10
  - beeps 8-3
  - configuration error 4-6
  - description 5-1
  - detecting problems 8-3
  - error detection 5-1, 5-2
  - error messages 5-2, 5-10
  - operation 5-1, 5-2
  - problem detecting 8-3
  - updating 4-29
- power, switching off 8-32
- printer problems 5-8
- problems
  - diskette drive 5-4
  - display 5-5
  - error prompt 5-8
  - fan 5-6
  - forgotten power-on password 5-6
  - general 5-6
  - hardware 5-1
  - hardware-related 8-3
  - intermittent 5-6
  - keyboard 5-6
  - mouse 5-6
  - no beep 5-5
  - options 5-7
  - overview 5-1
  - password prompt 5-8
  - pointing-device 5-6
  - power-on 5-2, 5-7
  - printer 5-8
  - screen 5-5
  - software 5-1, 5-9
  - solving 5-1, 5-2
  - troubleshooting charts 5-4
  - undetermined 8-31
  - user error 5-1

- processor chip, removing and replacing 8-44
- product data option 4-8
- program
  - Configuration/Setup Utility 4-6, 5-1
  - diagnostic 5-1, 5-3
  - navigation 8-6
  - power-on self-test (POST) 5-1
  - QAPlus/PRO 8-5
  - system 4-6, 4-29
  - test 8-5
  - utility 4-6

## Q

- QAPlus/PRO diagnostic program 8-5

## R

- RAM memory module kits, installing 3-4
- rear fan, replacing 8-40
- records, device A-1
- remove and replace
  - backplane 8-48
  - diskette drive 8-35
  - feature cards 8-34
  - front fan 8-39
  - hard disk drive 8-36, 8-37
  - LED assembly 8-41
  - power supply 8-38
  - power switch 8-41
  - procedures for 8-1, 8-32
  - processor chip 8-44
  - rear fan 8-40
  - SBC 8-42
  - video PMC card 8-47
- remove cover 3-2
- remove system unit from its mounting 8-33
- replacement parts 9-1
- requirements, grounding E-15
- resolutions, changing D-3, D-4
- resolutions, default D-1
- restore configuration 4-6
- revision level, verifying 4-29
- ROM (read-only memory) 4-29
- ROM shadowing 4-17
- run selected module tests 8-9

## S

- S3 Trio64V+ Super VGA driver, installing D-1
- safety
  - electrical E-11
  - general E-10
  - information E-10
  - inspection guide E-14

## SBC

- See single-board computer (IBM SBC)
- scripting 8-8
- SCSI ID A-1
- secure system unit 2-3
- security features 4-2
- security option, drives 4-14
- select monitor D-2
- selected module tests, running 8-9
- selected tests in test groups, changing 8-9
- self-tests, internal 5-1, 5-2
- sensor, temperature 4-26
- serial devices, external 4-24
- serial port assignments 4-24
- serial port pin assignments B-9
- serial ports (described) 4-23
- service parts warranty 9-1
- set date and time 4-13
- shadow ROM 4-17
- SIMMs (single inline memory modules), installing 3-4
- single-board computer (IBM SBC)
  - cache memory 3-7
  - component layout 6-2
  - connectors 6-5
  - features 6-1
  - FRUs 9-2
  - indicators 6-3
  - installing 3-3
  - jumpers 6-11
  - memory subsystem 6-3
  - parts catalog 9-2
  - ports, USB 4-26
  - power-supply connections 8-16
  - remove 3-4
  - removing and replacing 8-42
  - SIMMs 3-4
  - switch functions 6-11, B-7
  - updating flash EEPROM 4-29
- slot position, adapter 3-6
- software
  - errors 5-9
  - problems 5-1, 5-2
- solve problems 5-1
- special characters 4-28
- specifications, physical 1-4
- square brackets (field indication) 4-6
- start
  - Configuration/Setup Utility program 4-7
  - diagnostic programs 5-3
  - system unit 5-2
- start options option 4-15
- startup-sequence control 4-4
- static-sensitive devices, handling E-15
- stop tests 8-9
- storage device, mass, configuration information 4-12

## SVGA

- advantages 4-27
- description 4-27
- languages 4-28
- software compatibility 4-27
- special characters 4-28
- video configuration 4-28

## switch

- power 4-1
- processor speed 6-12
- processor voltage jumpers 6-11
- replacing power 8-41
- SBC 6-11, B-7
- voltage-selection 5-2
- switch off power 8-32
- symptom-to-FRU index 8-17
- symptoms, beep 8-18
- symptoms, no beeps 8-19
- system
  - memory (SIMMs) 3-4
  - programs, updating 4-29
  - security option 4-13
  - summary option 4-8
  - unit ID numbers A-1
  - unit, opening 8-33
- system records A-1

## T

- temperature, ambient air 1-4
- test group, memory 8-8
- test groups, viewing 8-7
- test scripts 8-8
- tests menu, module 8-6
- tests, stopping 8-9
- thermal monitor 4-27
- time and date, setting 4-13
- timer, watchdog 4-26
- tools, diagnostic 5-1
- top cover (FRU) 9-6
- trademarks and service marks E-1
- transfer data 4-24
- troubleshooting charts 5-4

## U

- undetermined problems 8-31
- update
  - flash programs 4-29
  - system programs diskette 4-29
  - system unit configuration 4-6
- update programs, downloading 8-2
- use QAPLus/PRO program 8-5
- use test programs 8-5
- user error problems 5-1

- utility program, Configuration/Setup 4-6

## V

- verify revision level 4-29
- vertical-refresh rate 4-28
- video drivers
  - See device drivers
- video PMC card
  - features 7-1
  - removing and replacing 8-47
- Video Setup option 4-11
- view
  - parallel-port assignment 4-25
  - serial port assignments 4-24
  - test groups 8-7
- view configuration information 4-6, 4-8
- vital product data code 8-2
- voltage range 1-4
- voltage selection, processor B-7
- voltage setting 2-2
- voltage-selection switch 2-2, 5-2, 8-38

## W

- warranty service parts 9-1
- watchdog timer 4-26
- watchdog/thermal setup option 4-16
- Web site 8-2
- Windows video drivers, installing D-2, D-4, D-5





---

# Readers' Comments — We'd Like to Hear from You

**IBM 7563 Passive Backplane System  
Installation, Operation,  
and Hardware Maintenance  
Publication No. S33L-2001-00**

**Overall, how satisfied are you with the information in this book?**

|                      | Very<br>Satisfied        | Satisfied                | Neutral                  | Dissatisfied             | Very<br>Dissatisfied     |
|----------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| Overall satisfaction | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |

**How satisfied are you that the information in this book is:**

|                          | Very<br>Satisfied        | Satisfied                | Neutral                  | Dissatisfied             | Very<br>Dissatisfied     |
|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| Accurate                 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| Complete                 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| Easy to find             | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| Easy to understand       | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| Well organized           | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| Applicable to your tasks | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |

**Please tell us how we can improve this book:**

Thank you for your responses. May we contact you? ☐ Yes ☐ No

When you send comments to IBM, you grant IBM a nonexclusive right to use or distribute your comments in any way it believes appropriate without incurring any obligation to you.

\_\_\_\_\_  
Name

\_\_\_\_\_  
Address

\_\_\_\_\_  
Company or Organization

 
\_\_\_\_\_  
Phone No.




Fold and Tape

Please do not staple

Fold and Tape



 NO POSTAGE  
NECESSARY  
IF MAILED IN THE  
UNITED STATES



## BUSINESS REPLY MAIL

FIRST-CLASS MAIL PERMIT NO. 40 ARMONK, NEW YORK

POSTAGE WILL BE PAID BY ADDRESSEE

International Business Machines Corporation  
Embedded Systems Development  
Department AXW, IMAD 2111  
1798 N.W. SPANISH RIVER BOULEVARD  
BOCA RATON FL 33431-9661



Fold and Tape

Please do not staple

Fold and Tape





Part Number: 47L2556



Printed in the United States of America  
on recycled paper containing 10%  
recovered post-consumer fiber.

S47L-2556-00



47L2556

