


# SERIAL/PARALLEL & GAME CARD USER'S MANUAL

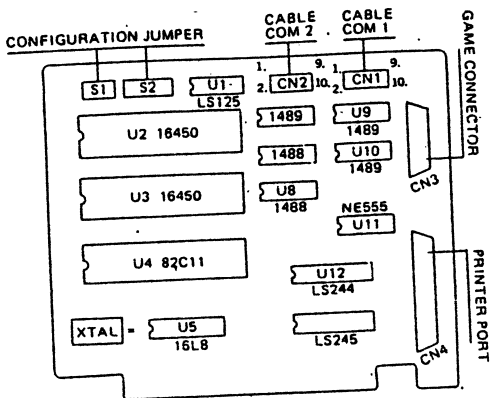

## I/O PORTS

3F8-3FF HFX  
2F8-2FF HEX  
3E8-3EF HEX  
2E8-2EF HEX

## PORTS CONFIGURATION

COM1  
COM2  
COM3  
COM4

Primary serial Port  
CN1

COM1  
COM2  
COM3  
COM3

Secondary serial Port  
CN2

COM2  
COM3  
COM4  
disable

S1-1  
OFF  
ON  
ON  
OFF

S1-2  
OFF  
OFF  
ON  
ON

Primary Serial Port

IRQ3  
IRQ4

Secondary Serial Port

IRQ3  
IRQ4

S2  
3 4 5 6  
OFF ON - -  
ON OFF - -  
- - OFF ON  
- - ON OFF

## I/O Ports

378-37A HEX (LPT1)  
278-27A HEX (LPT2)

PRINTER

IRQ5  
IRQ7

S2-1  
OFF  
ON

S1-3  
OFF  
ON  
S2-2  
ON  
OFF

## FACTORY DEFAULT SETTING OF JUMPERS

