


The math coprocessor socket is located on the CPU board, as illustrated in the following diagram.

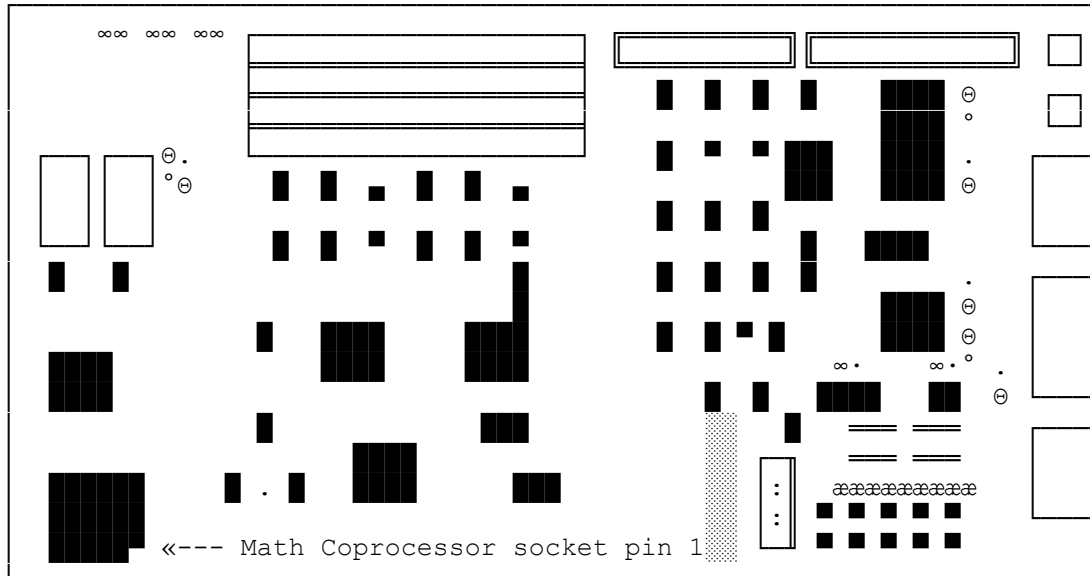

**WARNING!** Carefully read the instruction in this section before installing the coprocessor. Incorrect orientation or installation of the coprocessor can damage the coprocessor or the socket, and removal of the coprocessor requires a special extraction tool.

Additional instructions might be included with the coprocessor. If you choose not to install the coprocessor yourself, a trained technician at a Radio Shack Service Center can install it for you.

**CAUTION:** Before handling electrical components touch a grounded metal object to release any static electrical charge from your body.

To install a coprocessor:

1. Orient a coprocessor so that the dot on the corner of the coprocessor aligns with the notched corner. A small white arrow points to the Pin 1 corner of the socket. (See the preceding illustration.)
2. Do not bend or touch the metal pins. Press the coprocessor into the socket.