

## Errors:

Error Message	Cause	Action
COVER OPEN ERROR	The print cover is open or ajar	Close the cover completely and press [ON/OFF LINE].
PAPER EMPTY	The printer is out of paper or paper is jammed	Load or adjust paper.
PAPER LEVER ERROR	The release lever position is switched while the printer is loading paper.	Press [ON/OFF LINE] after returning the release lever to the correct position.
CARRIER POS. ERROR	The print head carriage mechanism has failed.	Turn the printer off, and then on again. Any data in the printer buffer is lost when you turn off the printer.
EEPROM ERROR	Control panel function or menu read/write error.	If you get the same message after several attempts, your unit may need service.
INTERNAL CG ERROR	Internal font error.	
RAM ERROR	RAM error.	

(dtc-07/26/93)