

### Installing/Selecting the Printer Driver:

When you install most software (such as word-processing programs), you specify one or more printer drivers. A printer driver tells the computer what information to send to the printer.

For best results, choose one of the following printer drivers, if they are available in your software.

- \* Tandy DMP-204
- \* Tandy DMP-240
- \* EPSON LQ-850
- \* EPSON LQ-2500 with color support

Select the correct printer driver, as described in the owner's manual for your software. If you do not get proper results when you print, be sure that you correctly installed the software. If you still have problems, contact your software supplier for further assistance.

DeskMate Drivers: DMP-240, DMP-204, and DMP-250

There is a color driver available from Computer Support Services for DeskMate versions 3.00, 3.02, and 3.03

Note: DeskMate Versions 3.04 and 3.05 already have a LQ-2500/2550 driver option included.

The new driver is easily installed, simply copy the printer driver DMPDE.RES to the hard drive directory that contains your DeskMate files. (For a floppy version of DeskMate, copy the file to each disk.)

Selecting the Driver:
-----------------------

You can make this driver your default driver by following these instructions:

1. Select Setup from the Accessory Menu (F10).
2. Select the Printer Setting Option (F2).  
A dialogue box appears.
3. Choose OTHER in the Printers list box
4. At the Driver name: prompt, type DMPDE.RES
5. Choose any other applicable settings.
6. Press OK to save the new choice.

(jlc-07/21/93)

□