


CONTROLS & STATUS INDICATORS

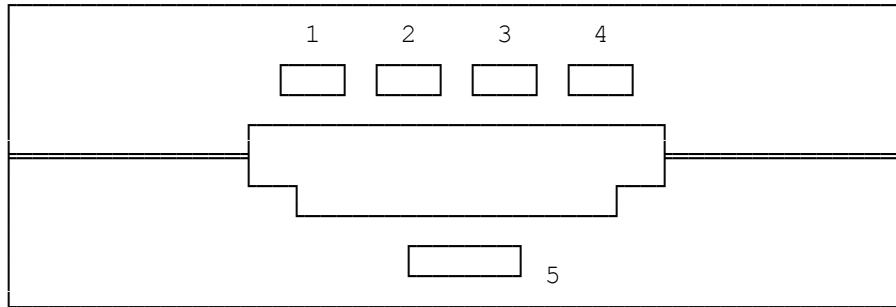

- 1. READ -- indicates that tape is being read.
- 2. WRITE -- indicates that tape is being written upon.
- 3. FORWARD -- means tape is running toward the end of tape.
- 4. REVERSE -- shows when tape is being rewound toward the beginning of tape.
- 5. EJECT button -- unlocks and partially ejects the tape cartridge.

(dtc-08/03/93)

□