



The 5 display adjustment knobs are located below the video screen on the left side behind the access panel. The panel door swings down when it is gently pulled forward at its left-most corner.

Vertical Hold:

This control stabilizes the display on the screen. Rotate the knob fully counterclockwise and then slowly until the display is stable.

Vertical Size:

This control sets vertical size.

Horizontal Center:

This control sets horizontal position. Rotate the knob to center the display.

Contrast and Brightness:

Adjust the screen brightness to compensate for room lighting.

Power ON/OFF:

To turn on the CM-11, press POWER. The POWER indicator lights. Press POWER again to turn off the monitor.

(abo-08/05/93)