

## SYMPTOM

## SOLUTION

---

Eight short beeps sound:

---

When you press [ANN,  
RECORD].

(Outgoing-announcement tape is  
missing.) Install tape.

---

When you press [ANSWER],  
[PLAY], [REWIND], [FAST-F],  
or [ERASE REWIND], or [MEMO].

(Incoming-message tape is missing.)  
Install tape.

---

When you press [REWIND],  
[FAST-F], or [ERASE REWIND],

INCOMING MESSAGE switch is set to  
ANN. ONLY.) Set to correct position

---

When you press [ERASE REWIND]  
or [REWIND]

Incoming-message tape is at the  
beginning. Press PLAY or FAST-F.

---

Eight short beeps sound and the  
ANSWER and MEMO indicators  
flash.

(Incoming-message tape ends before  
caller completes recording  
or the tape is full.) Replace  
tape.

(Outgoing-announcement tape ends  
and rewinds before announcement is  
complete.) Replace tape with one  
of correct length.  
(One or both tapes are torn.)  
Replace tape.

---

ANSWER and MEMO indicators  
blink after problem is corrected.

Possible internal circuitry or  
tape mechanism error.)  
1. Press [STOP]. 2. Turn the  
VOLUME/Power control off, then  
back on. 3. Disconnect, then  
reconnect the adapter.

---

Note: When the INCOMING MESSAGE switch is set to ANN. ONLY, if you press  
[ANSWER] without an incoming message cassette installed, eight beeps  
do not sound.

(RLR-02-24-94)