



With the ARCHER VCR/TV/FM switch you may alternately select one of two VHF, UHF, or FM sources (TV/FM Antenna, Cable System, VCR, Satellite Receiver, Computer, etc.) For connection to a TV, a VCR, or an FM receiver. Or, you may alternately send a single source to one of two TVs, VCRs, or FM Receivers. The examples above are only A few of the possible connections for this switch. Connections should be made using 75-ohm Coaxial Cable with F-connectors. 300-to-75 ohm Transformers will be needed for units that only have 300-ohm terminals.

Hi-isolation (60 dB or better) makes this switch special. This isolation prevents signal leakage that could cause interference among the connected components or between the connected components and other nearby TV/FM Receivers.

You may mount the switch on the back of the TV, using the supplied double-sided tape or on a wall using the supplied wood screws.

(br-7/18/94)

