

SYMPTOM	POSSIBLE CAUSE	CORRECTIVE ACTION
No power when POWER is set to ON.	No power plug connection at the AC outlet.	Insert the power plug into the AC outlet.
No sound	Volume control is set to minimum.	Turn up the volume.
	The wrong function is selected.	Select the right function.
No sound from any function	Faulty speaker connections.	Firmly connect the leads to the speaker terminals.
The CD changer does not operate.	The disc is loaded upside down.	Load the disc with the label side up.
The sound from the CD changer skips.	The disc is dirty.	Clean the disc.
	The disc is scratched.	Replace the disc.
Abnormal CD or display operation with the appropriate button settings.	The memory must be reset.	Disconnect the power cord, then reconnect it and resume operation.
Poor sound quality during playback.	Dolby mode is not set correctly.	Set the Dolby mode to match the tape being played.
	Dirty heads, pinch roller or capstans.	Clean the tape path.
Record mode does not operate.	The erase-protection tabs have been removed from the cassette.	Place tape over the tabs.

(tlc/all-08/31/93)