

SYMPTOM	POSSIBLE CAUSE	CORRECTIVE ACTION
No power when POWER is set to on	No power at the AC outlet, or the plug is not seated	Make sure there is power to the AC outlet and insert the system's power plug completely.
No sound	Volume control is set to minimum.	Turn up the volume.
	The wrong function is selected.	Select the correct function.
	Speakers are not selected.	Set SPEAKERS A or B to select speakers.
No sound from any function	Faulty speaker connections.	Firmly connect the leads to the speaker terminals
The CD changer does not operate.	The CD is loaded upside down.	Load the CD with the label side up.
The sound from the CD changer skips	The CD is dirty.	Clean the CD.
	The CD is scratched.	Replace the CD.
Abnormal CD or display operation with the appropriate button settings.	The tuner's memory must be reset.	Disconnect the power cord, then reconnect it, press RESET, and resume operation.
Poor sound quality during playback	Dolby mode is not set correctly.	Set Dolby NR to match the tape being played.
	Dirty heads, pinch roller or capstans	Clean the tape path.
Record mode does not operate.	The erase-protection tabs have been removed from the cassette.	Place tape over the tabs

(/all-9/15/94)