

If you have problems, please check the items below. They include several common faults which you can correct yourself.

TROUBLE	CHECK POINTS
No power	<ul style="list-style-type: none"> <li>* Make sure the power cord is plugged in.</li> <li>* Make sure the television is turned on.</li> </ul>
No picture or sound	<ul style="list-style-type: none"> <li>* Try another channel.</li> <li>* Check the setting of CABLE or AIR.</li> </ul>
Sound is OK; picture is poor	<ul style="list-style-type: none"> <li>* Try another channel (station trouble).</li> <li>* Check antenna connections.</li> <li>* Adjust the picture controls.</li> </ul>
Poor reception	<ul style="list-style-type: none"> <li>* Adjust the antenna.</li> <li>* Check antenna connections.</li> <li>* May be local interference.</li> </ul>
Lines in picture	<ul style="list-style-type: none"> <li>* Try another channel (station trouble).</li> <li>* Adjust the antenna.</li> <li>* Adjust the picture controls.</li> <li>* Check antenna connections.</li> <li>* May be local interference.</li> </ul>
Ghosts (multiple images)	<ul style="list-style-type: none"> <li>* Try another channel.</li> <li>* Adjust the antenna.</li> <li>* Adjust the picture controls.</li> <li>* Check antenna connections.</li> <li>* May be local interference.</li> </ul>
Remote control doesn't work.	<ul style="list-style-type: none"> <li>* Check batteries in the remote control.</li> </ul>
Cannot tune desired channel.	<ul style="list-style-type: none"> <li>* Try another channel (station trouble).</li> <li>* Check the setting of CABLE or AIR.</li> <li>* Channel may not be in channel memory. Store it using auto or manual programming.</li> </ul>