 


AUTO PICTURE CONTROL

Press APC on the remote control to display the status of PICTURE RESET. When PICTURE RESET is set to ON, the TV's picture shows the factory settings. If you adjust the picture's controls, ON automatically changes to OFF (see "Adjusting the Picture").

 
 
 
 
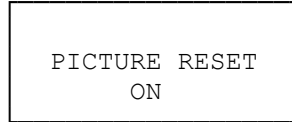 


If you have changed the picture controls and want to return to the factory settings, press APC until PICTURE RESET ON appears. If you want to return to the picture controls you previously selected, press APC until PICTURE RESET OFF appears.

ADJUSTING THE PICTURE

Follow these steps to adjust the picture's contrast, brightness, tint, color intensity and sharpness.

1. Press PICTURE on the remote control or FUNCTION on the front panel until the desired control appears.
2. Adjust the selected control level by press VOLUME + or -.



The bar graph on the screen shows the relative adjustment level.

Refer to the following control chart.

CONTROL ADJUSTMENT		CONTROL BUTTON	
		-	+
CONTRAST	Adjusts picture contrast	Lower	Higher
BRIGHTNESS	Adjusts picture brightness	Darker	Brighter
COLOR	Adjusts color intensity	Lighten	Deepen
TINT	Adjusts color tone	Purplish	Greenish
SHARPNESS	Adjusts picture sharpness	Softer	Sharper

(ALL-10/25/94)