

Your TANDYFAX 1000 fax machine has three special Program keys. This is useful if your frequently need to poll the same group of numbers. You can use these keys to store a sequence, or an additional One-Touch key.

Follow the procedure below to record a number, or a group of numbers, in a Program key.

- | PRESS | DISPLAY |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------|
| 1 FUNCTION | SET MODE
(PRESS MODE) |
| 2 MODE
down or up | PROGRAM KEYS |
| 3 START
ENTER | PROGRAM KEY |
| 4 Press one of the Program keys,
P1, P2, or P3
Example: P1 | NO. = [P1]
1: COMM. 2: DIALING |
| 5 To record a transmission or polling
sequence, press 1 for COMM. To
record an extra One-Touch key or a
One-Touch group of numbers, press
2 for DIALING and go to Step 6b. | No.=.....[P1]
1: XMT 2: POLLING |
| Example: 1 for COMM. | |
| 6a To record transmission numbers
(normal or timer), press 1 for XMIT
To record polling numbers, press
2 for Polling | DEFERRED XMT [P1]
1: YES 2: NO NO.= |
| | or |
| Example: 1 for XMT
Example: 1 for POLLING | DEFERRED POLL [P1]
1: YES 2: NO NO.= |
| 7a For timer transmission or polling,
press 1 for YES. For normal trans-
mission or polling, press 2 and
skip to Step 9a | START TIME
CALLED STATION |
| Example: 1 for YES | or |
| Example: 2 for NO | CALLED STATION [P1] |
| 8a For timer operation, enter the starting
time in four digits | START TIME 23:00
CALLED STATION |
| Example: 2 3 0 0 | |

(11:00 p.m.)

9a Recall from memory the number(s) to dial.

Example: One-Touch key 02

START TIME 23:00
[02] (Station name)

From, Step 7a

Example: One-Touch key 02

Called Station [P1]
[02] (Station name)

10a

PROGRAM NAME [P1]

11a Enter a program name of up to 15 characters, referring to the Character Code Table.

PROGRAM NAME [P1]
NEW YORK 11PM

Example: 2 3 1 4 3 2 etc.

12a

PROGRAM KEY

Go back to Step 4 and set another Program key, or return to the standby mode by pressing STANDBY/STOP.

If you selected 2. DIALING in Step 5:

6b Recall a single number from memory to assign it as an extra One-Touch key.

Example: To make the number stored in Memory 06 a One-Touch number, press MEMORY 0 6.

CALLED STATION [P1]
[06] (Station name)

Or, to assign the priority key as a Multi-Station polling key, enter two or more memory numbers.

Note that you can program multiple stations only for polling. For transmission, you can program only one station.

Note 1. You cannot record basic transmission settings, such as resolution.
2. You cannot program a key for multi-station transmission.

7b

PROGRAM NAME [P1]]

8b Enter a PROGRAM NAME of up to 15 characters, referring to the Character Code Table.

PROGRAM NAME [P1]
PROG. 1

Example: 2 5 2 7 2 4 1
6 8 4 7 0 0 1

9b

START
ENTER

PROGRAM KEY

Go back to Step 4 and set another Program key, or return to the standby mode by pressing STANDBY/STOP.

Erasing or Changing Program Key Setting

To erase the settings in a Program key, either completely or partially, and/or add new numbers or a new program name, use the following procedure.

PRESS	DISPLAY
1 FUNCTION	SET MODE (PRESS MODE)
2 MODE	PROGRAM KEYS
3 START. ENTER	PROGRAM KEY
4 Press the key you want to erase or change	NO.= [P1] 1: COMM. 2:DIALING

Example: P1.

5

START
ENTER

NOTE When the program key contains a timer transmit program and the timer is on, cancel the timer first. Then, cancel or change the Program key setting.

PRESS	DISPLAY
6a To erase the Program key,	NO.=1 [P1] 1 :COMM. 2: DIALING
CLEAR	NO.= [P1] 1:COMM. 2:DIALING
START ENTER	PROGRAM KEY
6b To enable or disable the timer setting, change the YES/NO setting while the	DEFERRED XMT [P1] 1 :YES 2:NO NO.=

display shows DEFERRED XMT.

Example: Disable the timer transmission
Press 2

DEFERRED XMT [P1]
1: YES 2: NO NO.=2

CALLED STATION [P1]

To change the start time for timer programs, enter a new start time while the display shows START TIME.

START TIME 23:00
[02] (Station name)

Example: 1800 (6:00 p.m.)

START TIME 18:00
[02] (Station name)

START
ENTER

PROGRAM NAME [P1]
NEW YORK 11PM

6c To add station(s) for DIALING, while the display shows CALLED STATIONS, recall the number(s) from memory.

CALLED STATIONS [P1]
[06] (Station name)

Example: One-Touch key 01

CALLED STATIONS [P1]
[01] (Station name)

6d To erase a station for DIALING MODE

CALLED STATIONS [P1]
[02] (Station name)

oruntil the display shows the station you want to erase

CALLED STATIONS [P1]
[01] (Station name)

CLEAR and START

PROGRAM NAME....[P1]
PROG. 1

6e To add or erase the station(s) for timer programs, while the display shows START TIME.

START TIME 23:00
[01] (Station name)

MODE
or

START TIME 23:00

After the cursor on the start time setting goes out, follow the above procedure for DIALING program.

6f To change the program name, while the display shows PROGRAM NAME.

PROGRAM NAME [P1]
PROG. 1

Write over the new program name

PROGRAM NAME [P1]

referring to the character code table

EUROPE

START
ENTER

PROGRAM KEY

Repeat above to erase/change another Program key, or return to the standby mode by pressing STANDBY/STOP.

Using Program Keys

Once you have stored entries in the program keys, you can use the keys as follows:

PRESS

- 1 To send documents, set the documents on the ADF and press the Program key.

Example: P2

If the key is Programmed with multiple station numbers, the key is not accepted.

To poll, simply press the Program key.

Example: P2

- 2 Dialing begins automatically

DISPLAY

DOCUMENT SET

DOCUMENT SET
[P2] (Program Name)

DOCUMENT SET
[P2] NOT ACCEPTED

04/27/1988 18:15
[P2] (Program Name)

* DIALING*
[20] (Station name)

NOTE The display varies depending on the mode settings.

(smc-03/02/94)