

PRODUCT INFORMATION

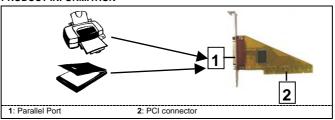



INSTALLATION

Step	Action	Illustration
1	Switch off PC	Ø PC
2	Open PC	
3	Insert PCI card into free PCI slot	
4	Close PC	


D.TEC PARALLEL PCI CARD

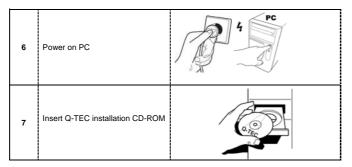

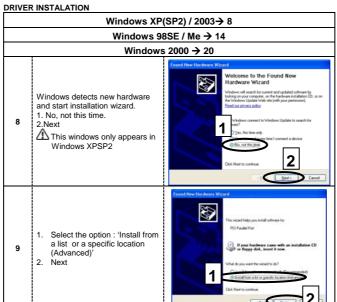

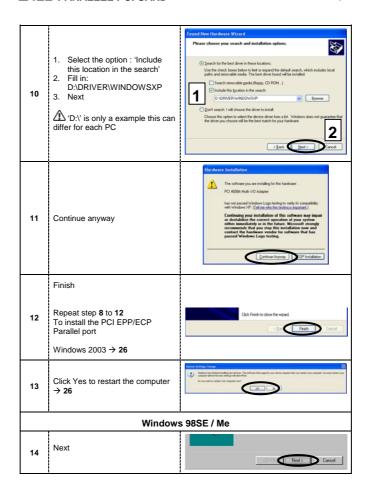


D.TEC PARALLEL PCI CARD

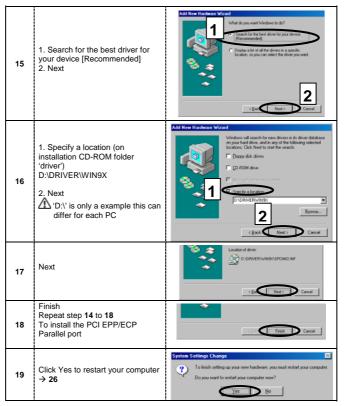


Windows 2000		
20	Next	To continue, click Neet.

4

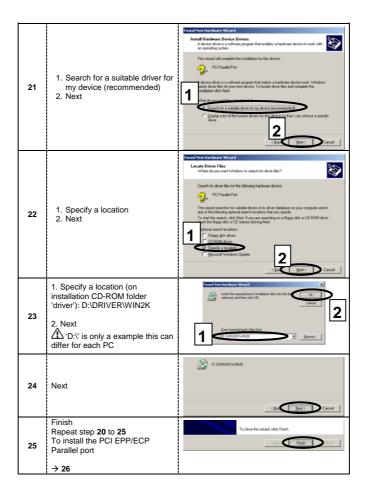

D.TEC PARALLEL PCI CARD

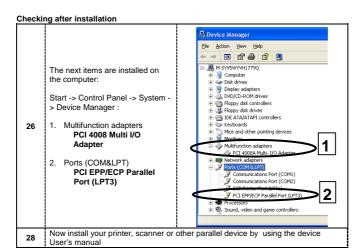

Check most up to date FAQ, drivers and manuals on http://www.qtec.info/12886

This device meets the essential requirements and other relevant conditions of the applicable European directives. The Declaration of Conformity (DoC) is available at www.qtec.info/12886/ce

- Disconnect the power plug from PC before building in the PCI card

For warranty conditions see www.qtec.info/warranty

Reproduction of this manual or any part of it is prohibited without permission from Q-Tec.